
NYTOP®

Rock Sliders Installation Guide

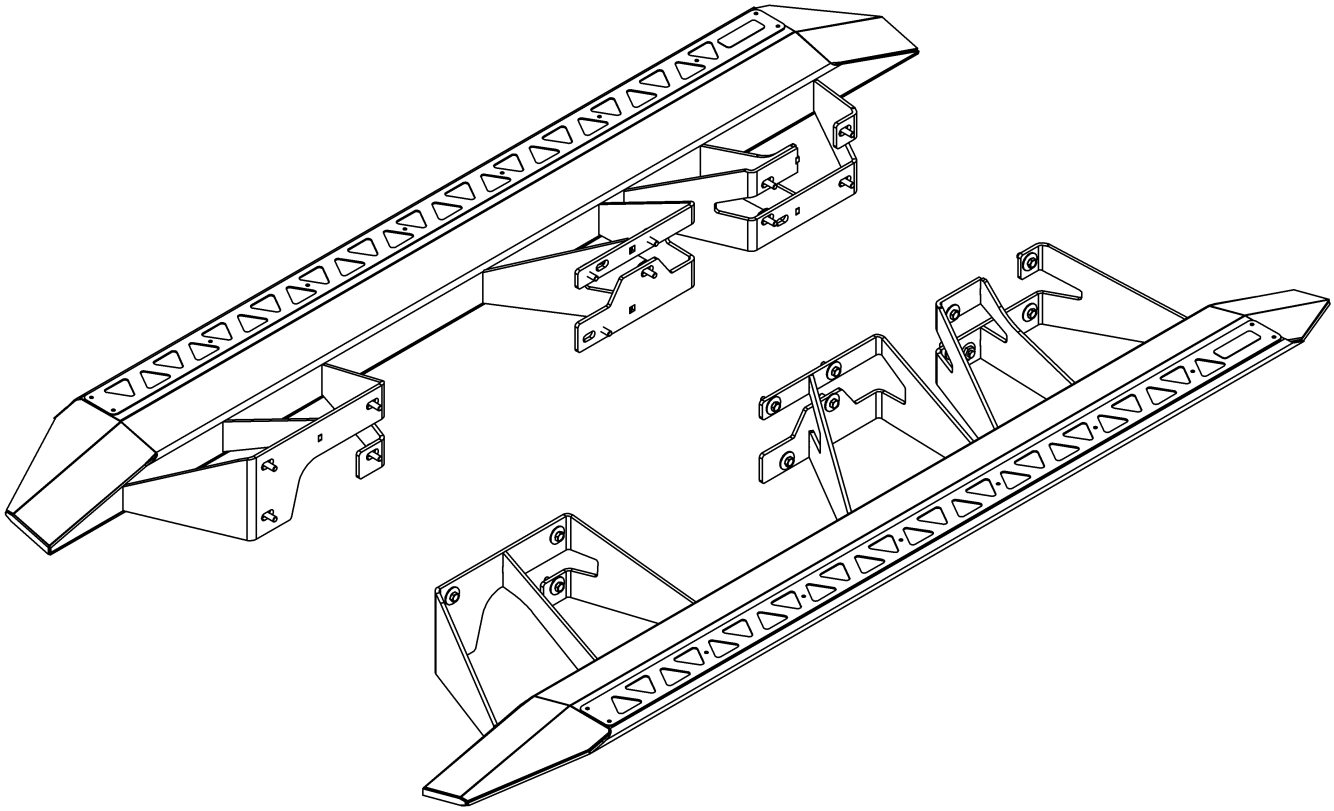


4R5-D
Weight: 150 lbs.

Compatible Models:
2014-2024 Toyota 4Runner
2010-2023 Lexus GX460

Included hardware:

M8x25mm
Hex Head Screw




x 23

Large M8 Washer




x 23

Large M10 Washer

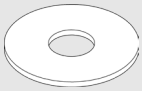



x 1


1/4 inch BoxBolt®

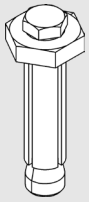


x 1

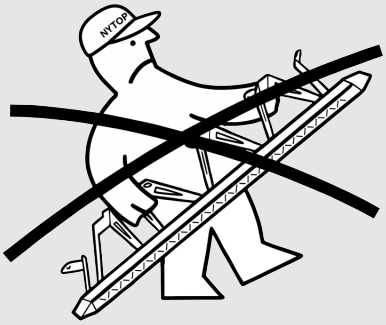


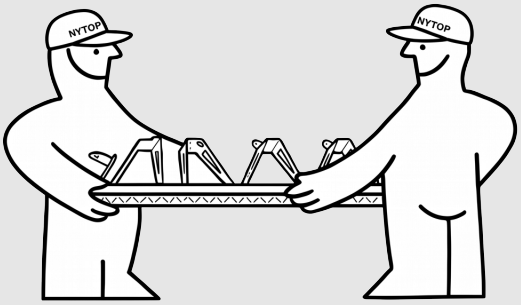

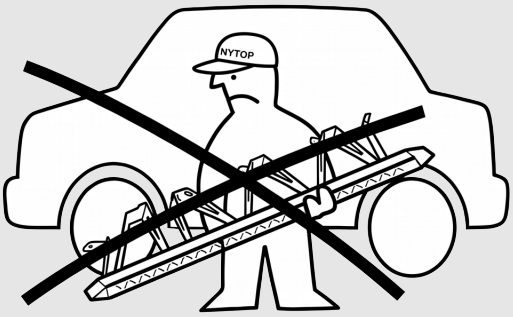

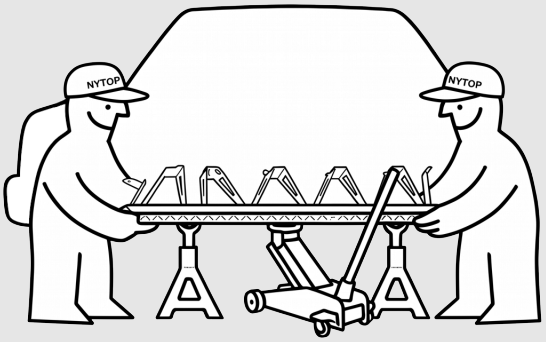



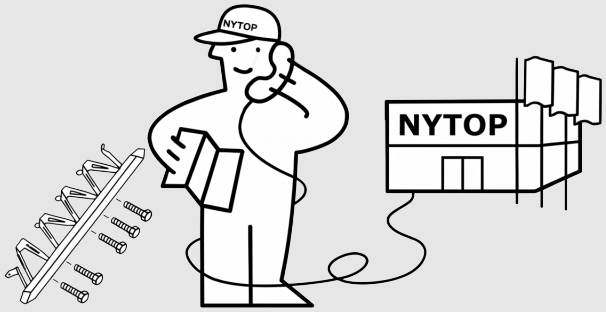


M8x25mm	Large M8 Washer
x 12	x 12


Starting with the driver side, remove the plastic clips and the emergency brake line bracket, then tuck the emergency brake line up and out of the way.

If the threads are worn out, rusted, or filled with debris, use an M8 x 1.25 tap to chase the threads.

Place the rock slider onto the frame and ensure the energency brake line is tucked between the rear brackets as shown below. Install twelve M8x25mm bolts and large M8 washers to secure the slider to the frame. Reinstall the emergency brake bracket onto the rock slider. Make any adjustments necessary and snug down the M8 bolts.

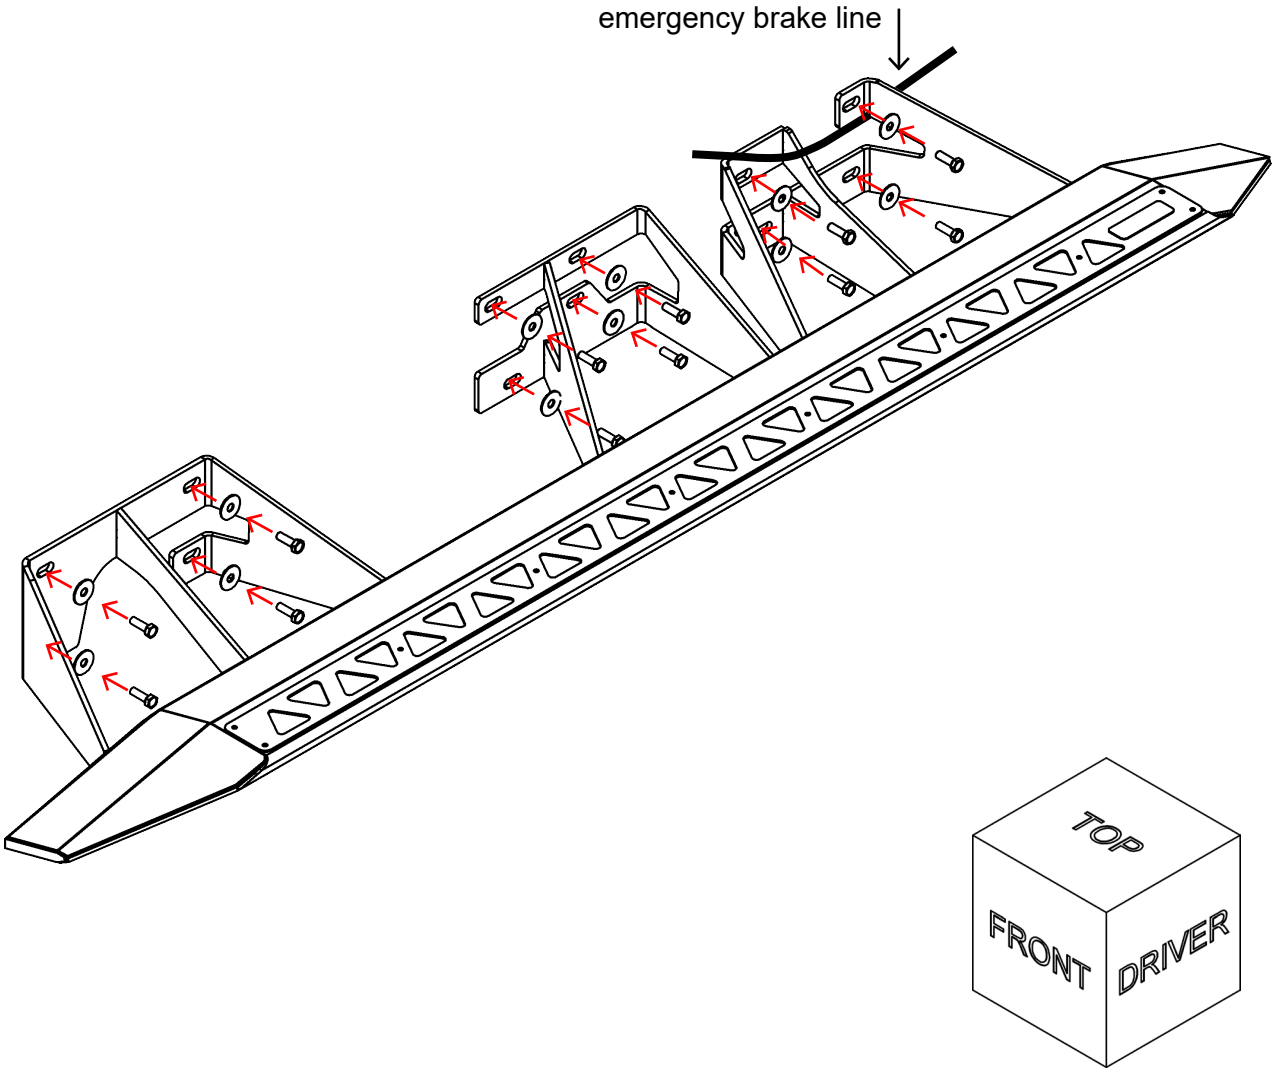


1/4 inch BoxBolt®

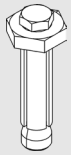

x 1

Large M10 Washer

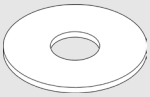



x 1

Install the 1/4 inch BoxBolt® with the large M10 washer.

Hold the outer hex of the BoxBolt® with an 18mm wrench and tighten the inner hex with an M10 socket.

Do not use power tools while tightening this bolt.

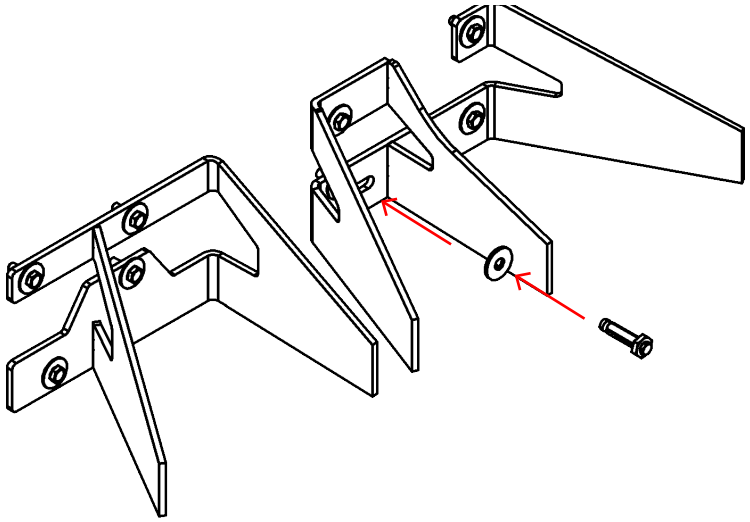

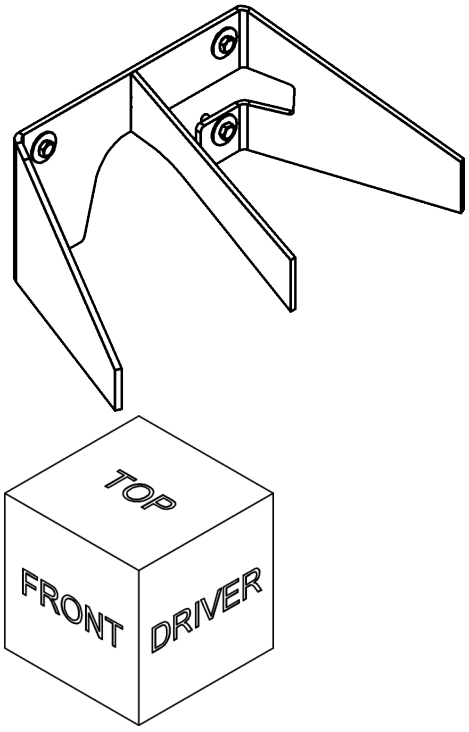

Follow the same steps to install the passenger-side rock slider. Note that the 1/4 inch BoxBolt® is not installed on the passenger side.

Torque the bolts to the following specifications.
M8 bolts to 21 ft-lbs./29 Nm.
1/4 inch BoxBolt® to 14 ft-lbs./19 Nm.

